

# PerfectMatch™ Headrests Vehicle Installation Manual

## A. Pre-Installation Precaution



### 1. Use Seat and floor protectors to avoid damage to surfaces

Disconnect the battery prior to any ground or harness removal. The battery may be temporarily reconnected to perform such tasks as power seat repositioning / testing or taking the vehicle out of gear. Once tasks are completed, disconnect the battery until installation is complete and vehicle is reassembled. If the vehicle is equipped with an Anti-theft radio, the code must be written down prior to disconnecting the battery cable. The code must be re-entered when the negative battery cable is re-installed. Disconnecting the battery may cause certain vehicle settings to be lost. Manufacturer's recommendations for the battery removal should be followed.

## B. Headrest Removal and Installation

1. Locate the two release clips located at the bottom of the headrest post guides. (Figure B1)
2. Using a plastic pry tool, push in the locking release clips.
3. While pushing on the release clips, pull up on the factory headrest until it comes fully out of the post guides. (Figure B2)
4. Take the PerfectMatch™ Headrest marked with an "A" sticker and place it on the floor in back of the driver's side seat.
5. Locate the left post cable wire that has the black cable end and insert it into the left post guide on the driver's side seat. (Figure B3)
6. Locate the right post cable wire that has the red/green cable end and insert it into the right post guide on the driver's side seat. (Figure B3)
7. Repeat steps 5-6 for the passenger headrest.

Figure B1

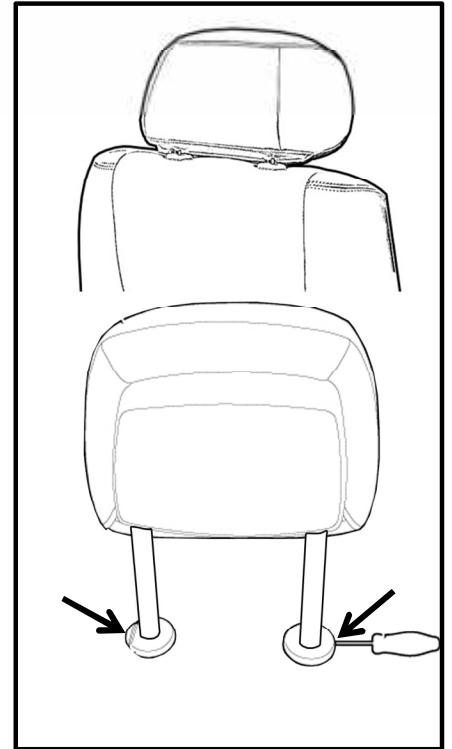


Figure B2


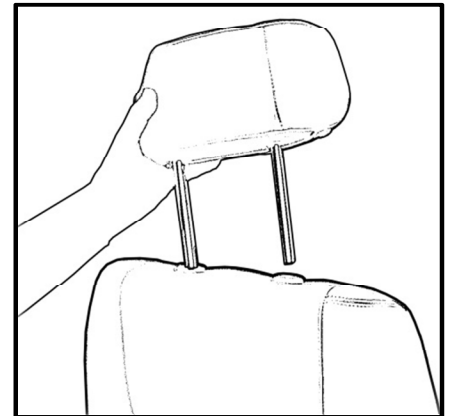


Figure B3

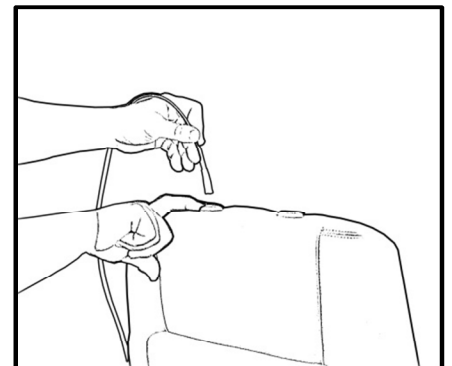

## PerfectMatch™ Headrests Vehicle Installation Manual

### C. Installing the Headrest Wires

1. If the seat has a J-clip holding the seat material together at the bottom of the seat, undo the J-clip to reveal the headrest wires in the seat.

**Note: If the seat has a plastic seat back, remove the seat back and locate the headrest wires.**

2. Pull both the red/green and black cables to the bottom of the seat.

**Note: Leave enough slack for the headrest to move up and down.**

3. Push the PerfectMatch™ Headrest down until it locks into place. (Figure C1)

**Note: Move the headrests up and down to make sure there is enough wire length.**


4. Installed PerfectMatch™ Headrest. (Figure C2)

### D. Connecting the PerfectMatch™ Wires (Figure D1)

1. Connect the red wire to the Vehicles Accessory wire.
2. Connect the black wire to the Vehicles Chassis Ground.
3. Connect the Audio Output to the Vehicles Aux Audio Input
4. Video Output is for optional accessories.

### E. How to play system audio through the car stereo

#### 1. FM Transmitter

- a. Locate the FM Transmitter app on the tablet.
- b. The FM app is located on the Apps page.
- c. The app icon has the FM Transmitter logo: 

**NOTE: FM Transmitter only works when tablet is docked into the headrest**

- d. Press the Power button on the screen to turn on the FM Transmitter.
- e. Use the left and right arrows to adjust the FM frequency.
- f. The audio of the selected tablet will now come through the factory stereo.

#### 2. Aux Input (Optional)

- a. Connect the Audio Output to the Vehicles Aux Audio Input.

Figure C1

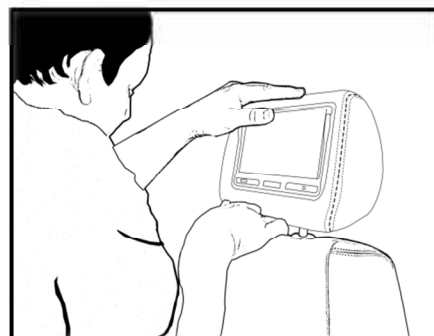


Figure C2

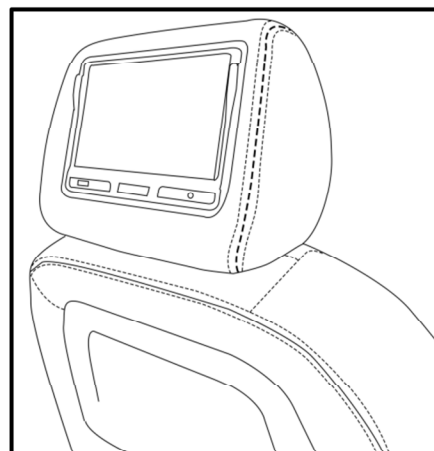


Figure D1

